

Adjust the diffuser 5 degrees towards the exterior of the building. Confirm diffuser adjustment after power has been supplied to the Air Barrier. See owners manual.

### Right Hand Motor Shown

**ENERSHIELD INDUSTRIES LTD**  
 16821-113 AVENUE  
 EDMONTON, ALBERTA T5M 2X2  
 PH (780) 482-4662 FAX (780) 482-4074  
 E-mail: info@enershield.ca  
 www.enershield.ca


## Ultrashield Air Barrier

VOLTAGAGE	VOLTAGAGE	VOLTAGAGE	Blowers
208V 3phase 60 Hz	460V 3phase 60 Hz	575V 3phase 60 Hz	5
Motor (S)	Motor (S)	Motor (S)	
1 @ 10 hp	1 @ 10 hp	1 @ 10 hp	
28.3 amps FLA	12.2 amps FLA	9.6 amps FLA	

## ULTRASHIELD

## US-120

Air Velocity (fpm) (m/s)	6500/33
Air Volume (cfm) (l/s)	19, 875/9380
Total hp/watts	10 hp/7460W
Weight lbs/Kg	800 lbs/363 Kg

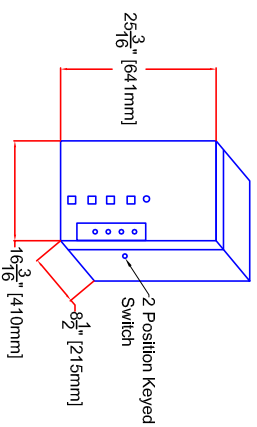

CSA & CWB Certified  
 For environmental separation from 14" - 18"